
# **PROFESSIONAL FLOORING INSTALLATION KIT**

- Includes all the tools needed to install plank flooring
- **PFIK** includes:
  - (1) STB8 Stepped Tapping Block is used to tightly fasten plank flooring together without damage and features a multi-sided design that is compatible with most plank flooring types
  - (1) **PPB14** Pro Pull Bar is used to tightly fasten plank flooring together in areas where a tapping block won't fit, like against walls and under toe kicks and features felt backing to protect the floor from scratches
  - (30) **3SPS** 3-Sided Pro Spacers are used to provide the correct spacing between the flooring being installed and walls and require half as many spacers as wedges

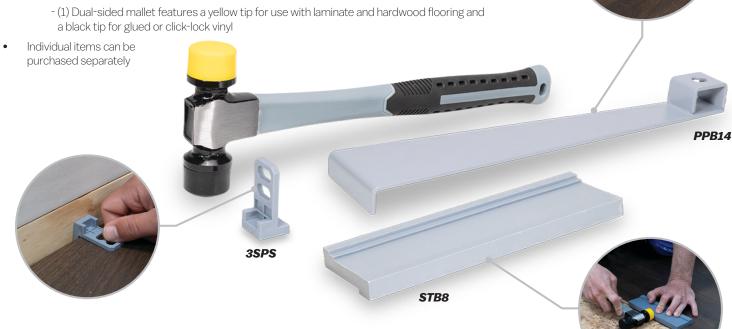

EDI	Part#	Description	Outer	
33151	PFIK	Professional Flooring Installation Kit	8	



## **Stepped Tapping Block**


- Pushes the tongue-and-groove or edges of resilient vinyl tile, laminate, or hardwood flooring planks together to create a tight seam
- Versatile multi-sided design is compatible with most plank flooring types
- Built with durable materials for long-lasting performance
- For use with a soft face mallet only to protect flooring; never use a metal hammer



EDI	Part#	Length-in	Length-mm	Outer
33193	STB8	8	203	8

### **Professional Pull Bar**

- Ideal for installing planks along walls and in tight spaces
- Features felt backing to protect the floor from scratches
- Fastens planks together tightly in areas where a tapping block can't fit
- Measures 14" (356 mm) in length for installing longer planks

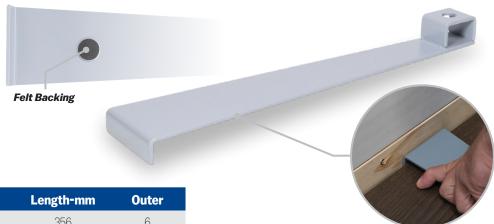

EDI	Part#	Length-in	Length-mm	Outer
33145	PPB14	14	356	6


Fits in Tight Areas

# **3-Sided Pro Spacers**

- Used to level and straighten rows of vinyl flooring
- Requires half as many spacers as wedges
- 3-sided design for ¼" (6 mm), ½" (13 mm), and 1" (25 mm) grout joints
- Reusable spacers come in resealable bags of 30



Lay Flat During Installation

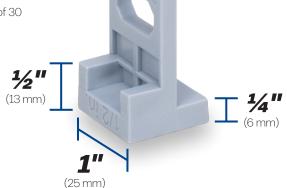



Resealable Bag

EDI	Part#	Quantity	Outer
33155	3SPS	30	6

