


SUPERIOR QUICK START GUIDE

D-12345

Battery Access Plate

QAS Mount with QAS Plungers

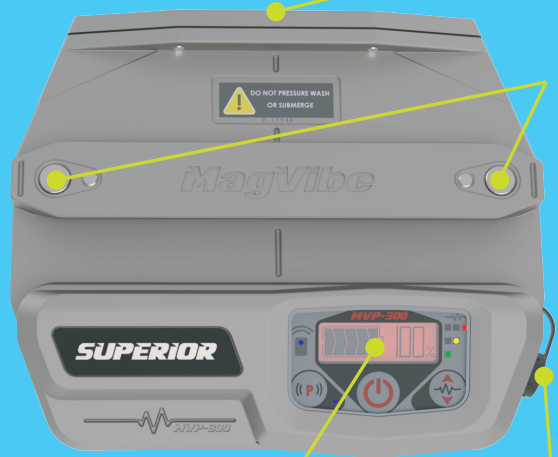

Membrane Switch with Battery Level Indicator

Charging Port




www.superiorinnovationsinc.com/patents


Serial # Plate

Mounting

1. Slide the ProTilt onto MagVibe QAS mount.
2. Align the ProTilt in the center of the MagVibe.

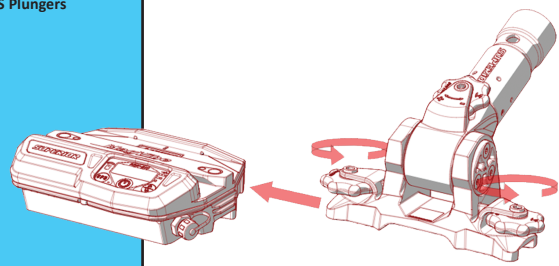

3. Slide the MagVibe and ProTilt onto the QAS of the float.

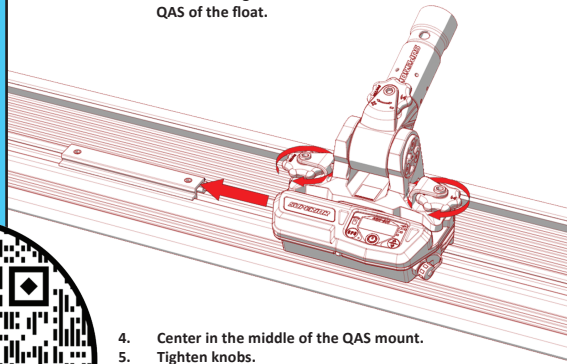

4. Center in the middle of the QAS mount.
5. Tighten knobs.

Cleaning

Wipe down with a wet cloth.


DO NOT PRESSURE WASH OR SUBMERGE!

Customer Service:
(844) 624 - 8423
www.superiorinnovationsinc.com


Charging




1. Unscrew canteen - style seal cap on the MagVibe to expose the charging port.

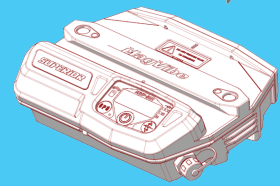

2. Screw charger output cord onto charger port.

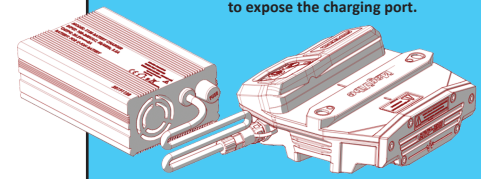

3. Plug the charger into a wall outlet.




4. The charger LED will turn red and begin to charge. When fully charged the LED will turn solid green.



on-line Manuals with Smart Phone Camera

MagVibe


Manual Control

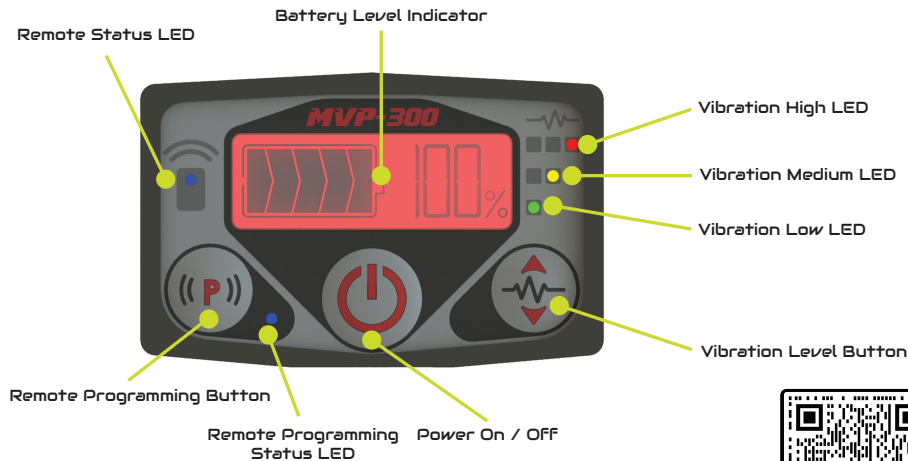

1. PRESS POWER BUTTON  ONCE TO TURN ON.
2. WAIT FOR BATTERY INDICATOR TO COME ON.
3. PRESS POWER BUTTON  TWICE WITHIN 1 SECOND.
VIBRATION WILL START IN LOW LEVEL.
4. PRESS VIBRATION LEVEL BUTTON  TO CHANGE LEVEL.
5. PRESS POWER BUTTON  ONCE TO TURN OFF.



on-line Manuals with
Smart Phone Camera

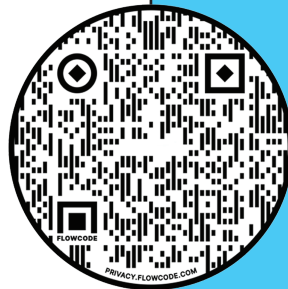


Register on-line with
Smart Phone Camera

LITHIUM-ION BATTERY HEALTH

1. FULLY CHARGE BATTERY BEFORE FIRST USE.
2. DO NOT OPERATE BELOW 5%. **YOU CAN PERMANENTLY DAMAGE THE BATTERY IF 0% IS REACHED.**
3. CHARGE AFTER EVERY USE.



Remote Control

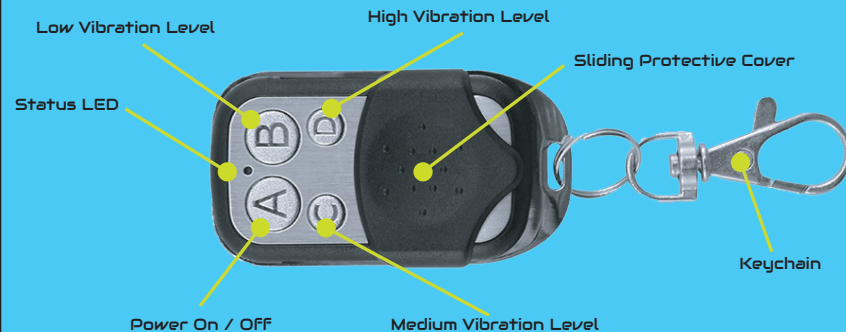

1. PRESS POWER BUTTON  ONCE TO TURN ON.
2. WAIT FOR BATTERY INDICATOR TO COME ON.
3. PRESS BUTTON  A TO START VIBRATION.
VIBRATION WILL START IN LOW LEVEL.
4. PRESS BUTTON  B  C  D TO CHANGE LEVEL.
5. PRESS POWER BUTTON  ONCE TO TURN OFF.

D-12345



MVP-300

www.superiorinnovationsinc.com

MagVibe